

EN Operating / Care Instructions Sidelift 6400

1. Operating instructions

Sidelift 6400 is a straight, motorised worktop lift. Cabinets can be hung under the entire lift or under certain sections.


Height adjustment is made with floor-mounted, powerful motors (400 kg lifting power) which are located on the short sides. Safety switch under cabinets and where there are spaces for knees.

- Press and hold the button to start the operation.
- Release the button when the worktop is at the desired level.

Pos. 1 - Safety trip panel underneath the cabinet

Pos. 2 - Safety strip

Pos. 3 - Control buttons

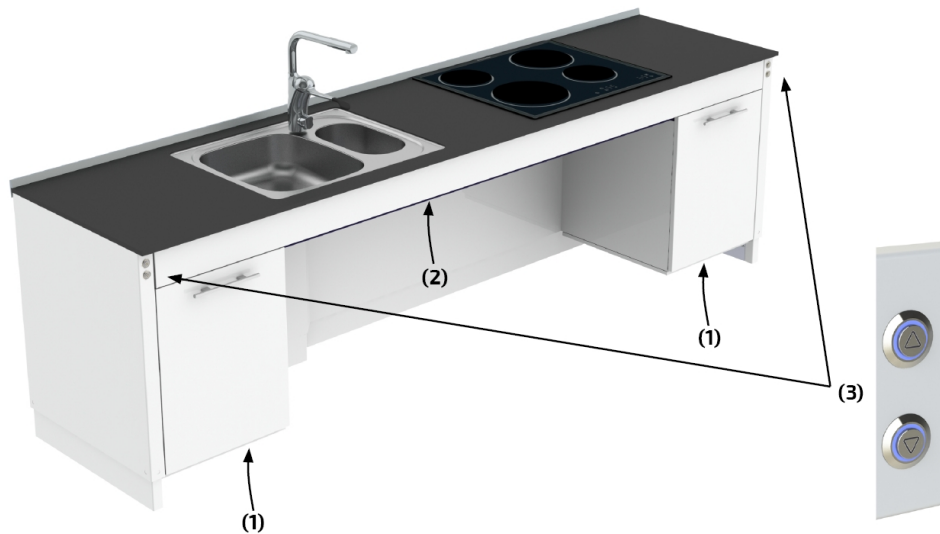

2. Maintenance

The lifting system is maintenance-free. Greasing and other actions are made during the manufacturing for the lifetime of the Diagonal lift. From safety point of view however some components shall be inspected each year.

- Inspections, service and repair work shall be made by competent persons.
- Remove the objects from the worktop before maintenance and repair works are made.

3. Functional test

- Run the lift unit down and up all the way to respectively end position and check that it moves freely, without hindrance and jarring sounds.
 - Check that no cables or hoses are jammed and that they are fixed.
 - Check that the floor mount is intact.
 - Lower the lift unit and check that the security strip under the aluminium frame works properly, by means of pressing lightly onto it. The lift shall stop immediately.
- Make the same test with all safety trip panels underneath each cabinet.

4. Cleaning

Clean with lukewarm water and a non-scratching detergent containing soap or similar. Use a soft cloth or similar. After cleaning the surfaces shall be dried to avoid lime deposits.

Scratching detergents or tools e.g. steel wool may not be used.
Consider that the product contains electrical components.

5. Service & maintenance records

Order	Serial	Date
--------------	---------------	-------------

Date	Date
Sign	Sign
Remarks	Remarks

Date	Date
Sign	Sign
Remarks	Remarks