EN Operating / Care Instructions Changing table 343

1. Operating instructions

Height adjustable baby changing table.

- Press and hold the button to start the operation.
- Release the button when the changing table is at the desired level.

Pos. 1 Control button



2. Maintenance

The changing table is maintenance-free. Greasing and other actions are made during the manufacturing for the lifetime of the lift. From safety point of view however some components shall be inspected each year.

- Inspections, service and repair work shall be made by competent persons.
- Remove any objects from the changing table before maintenance and repair works are made.

3. Functional test

- Minimum distance to any adjacent fitting must be at least 50 mm.
 If the distance from the changing surface to a wall or an adjacent fitting is less than 50 mm, a pinching hazard exists.
- Check that the changing table is firmly in place. If necessary, adjust the adjustable feets under the frame.
- Run the changing table down and up all the way to respectively end position. Check that it moves freely, without hindrance and jarring sounds.
- Check that no cables are jammed.
- If the changing table does not reach the lowest position: Press the down button for 5 seconds until the control box clicks. When the control box clicks the synchronisation is ok.
- Model with bathtub:
 Run the changing table to the end position and make sure the hoses are long enough above the fixing point.

4. Cleaning

Clean with lukewarm water and a non-scratching detergent containing soap or similar. Use a soft cloth or similar. After cleaning the surfaces shall be dried to avoid lime deposits.

Scratching detergents or tools e.g. steel wool may not be used. Consider that the product contains electrical components.

5. Service & maintenance records

Order	Serial		Date
Date		Date	
Sign		Sign	
Remarks		Remarks	
Date		Date	
Sign		Sign	
Remarks		Remarks	